

# FITTING STRAIGHT SENSOR TO A SAF-NG-SG GUARD PLATE

1




Cut the heat shrink to **115 mm** in length for the straight sensor.

2



Using a heat gun, heat the heat shrink starting at the sensor (as shown above) and work along the cable towards the plug.

3

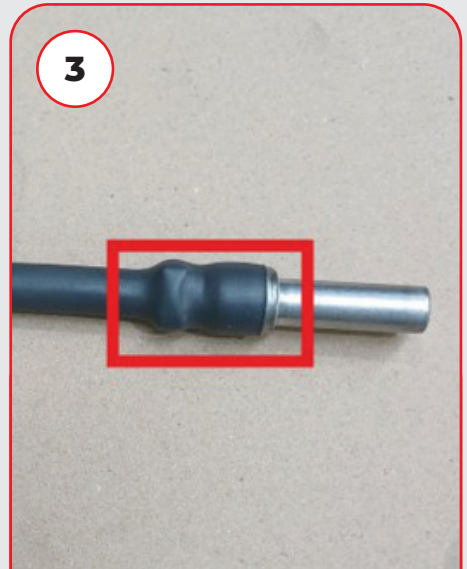

Ensure the heat shrink fully covers the **canister**, which is highlighted in the **red box** above. Below is an example of how the sensor should look once the process is complete.